

Elite

With Evo Stand

Getting Started Guide

Follow this guide to set up your Elite Evo as a screw mounted or freestanding tablet stand.

Screw Mounting

Locate the below items along with your tablet device and charging cable and continue to Step 1.



Evo / Evo X
Stand



Elite Holder




Keys




x4 Screws




x3 Wood
Screws

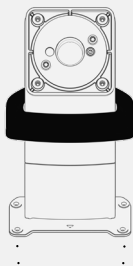


Step 1 Lift the Evo pole base cover from the base plate & drill pilot holes.

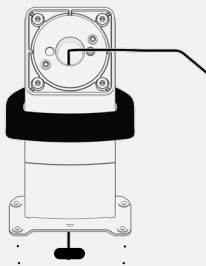


Step 2 If you are running your charging cable through the surface, ensure to drill a larger hole to feed cable through.

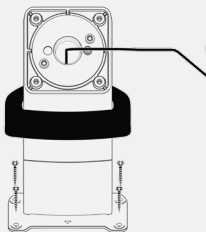

Step 3 Screw down your Evo pole through the base plate using the wood screws provided & then press down base cover.

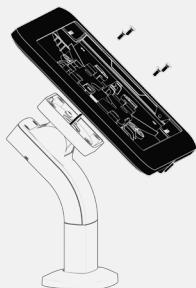

Step 4 Place Elite holder on Evo pole & screw in the 4 screws.

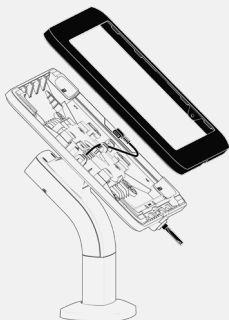


Step 5 Unlock the Elite Holder with keys provided and, if applicable, slide the latch to remove the faceplate.




Step 6 Plug in charging cable & place tablet into case, place faceplate back on & lock.

Freestanding

 Locate the below items along with your tablet device and charging cable and continue to Step 1.



Evo / Evo X
Stand

 


Elite Holder




Keys



x4 Screws

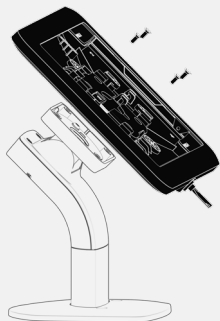


Step 1 Place Elite holder on Evo pole & screw in the 4 screws. Unlock the Elite Holder with keys provided and, if applicable, slide the latch to remove the faceplate.

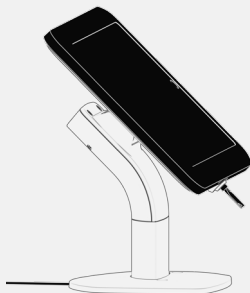

Step 2 Feed charging cable through & plug in. Put tablet into the holder & place faceplate back on & lock.


Optional Extras

Extras marked as (X) are only available with the **Evo X** pole.

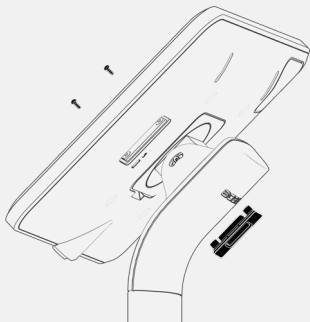

Cable Cutout


Unscrew existing closed cable cutout & install the open cable cutout included with stand.

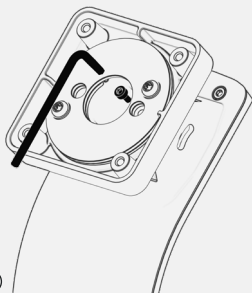

(X)

Evo X Rotation Lock

Place case on the pole in desired rotation & screw lock screw as shown to lock rotation.

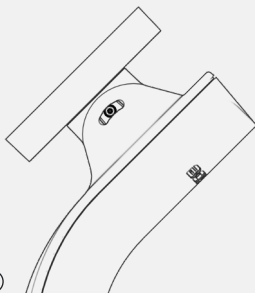

(X)

Evo X Tilt Adjustment Lock

Using Allen key provided, tighten screw at desired angle to lock in position.



US Customer Support

1800 293 9703

sales@bosstab.com

Australia Customer Support

1800 870 132

sales@bosstab.com.au

Warranty & Returns If you receive an item that is faulty or damaged then you can send it back for a refund, replacement or store credit & we'll pay for the return postage costs. We offer a 12 month warranty on items that are deemed defective by the manufacturer. If you have a defective product covered by this warranty, we will either repair using new or refurbished parts, or if repair is not possible, replace the item. The warranty will not cover loss or theft, nor damage deemed to be caused by misuse or unauthorized modification. To view our full returns policy & initiate a return please visit www.bosstab.com