




QUALITY BATHROOMS SINCE 1972

## **STRATOS ELITE SLIDING DOOR INSTALLATION MANUAL**

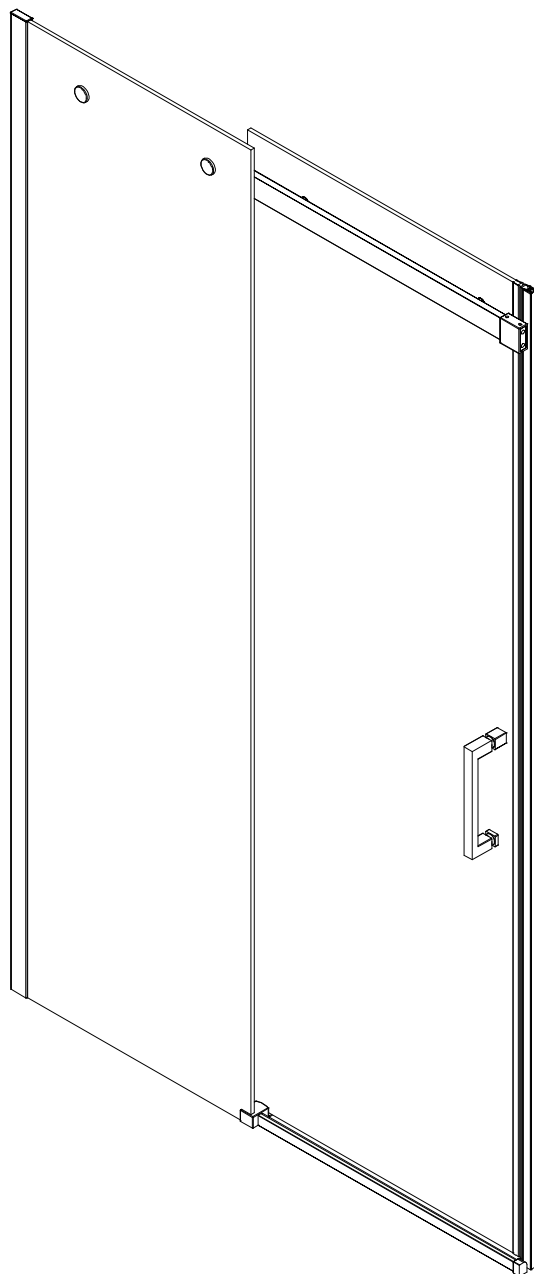

**1200mm/1400mm/1700mm**

## Assembly and installation guide

### Before you start: ATTENTION

Please read these instructions through carefully before you start the installation. Incorrect product installation may result in serious product failure which will not be covered under your guarantee.







The wall profiles are designed to allow for 20mm adjustment when fitted to out of true walls. The thickness of the tiles used will affect the overall position of the assembly in situ.






Check the number of components to ensure you have all the parts listed and make sure you have the right tools to hand.


Two people are required for certain parts of the assembly and it is always recommended that a technically competent installer should undertake the installation.











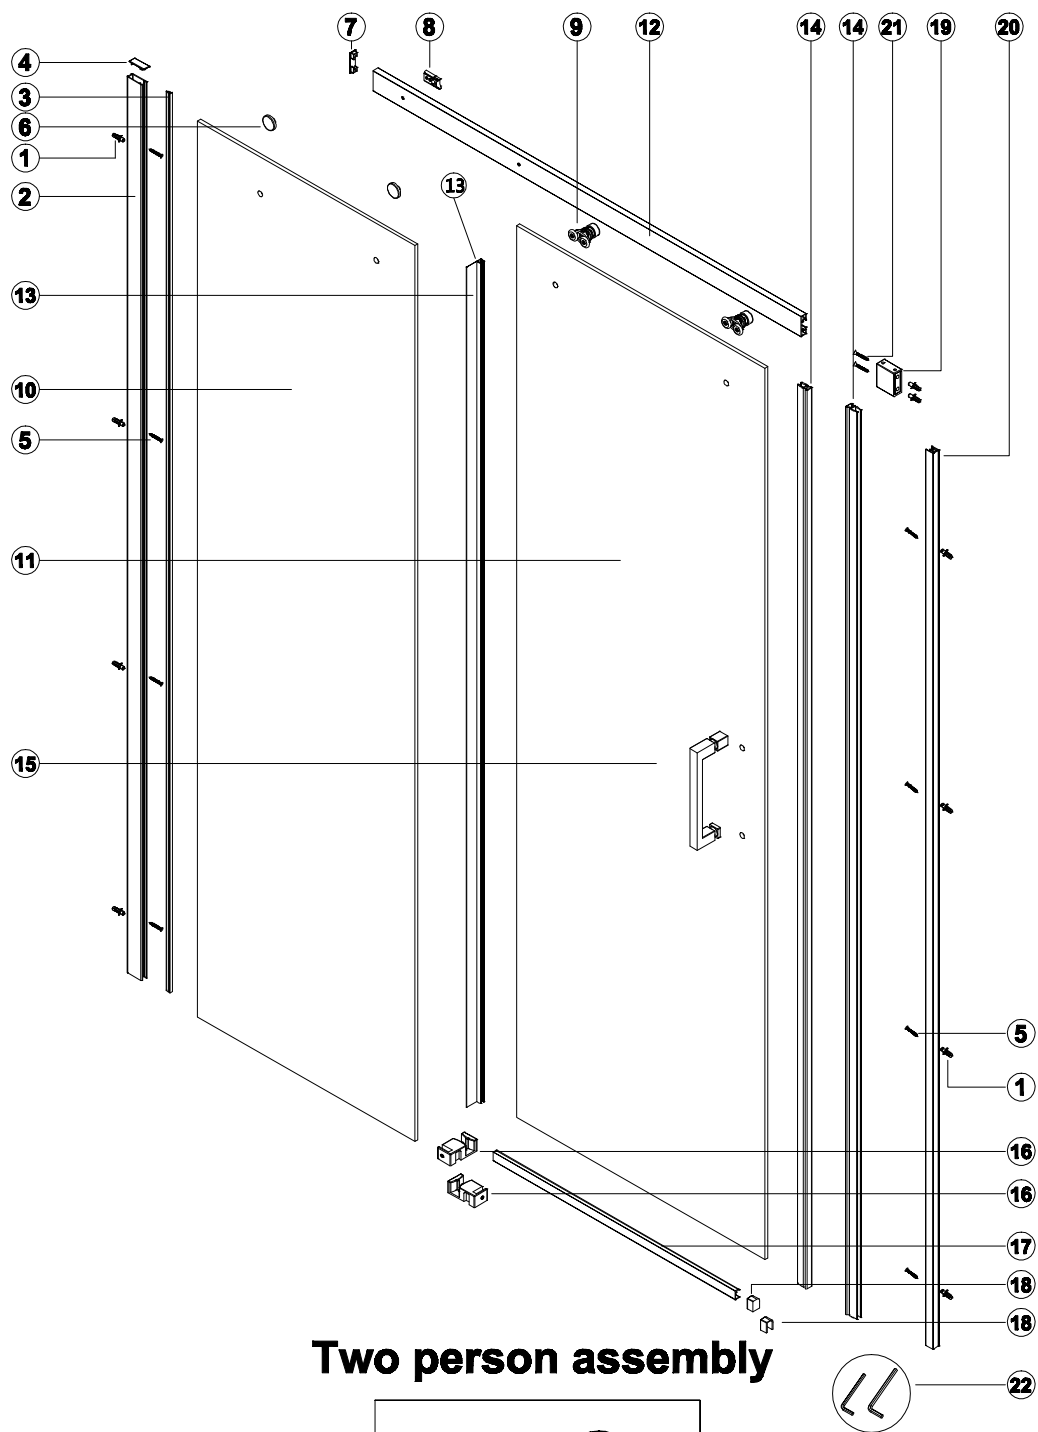
Ensure that the enclosure is fitted to a level base. The wall plugs included with this product are suitable only for solid walls. Plasterboard or stud walls may require specialized fixings which are not provided. Handle all glass components with extreme care avoiding any damage to the corners and edges which may cause it to shatter.













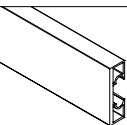


### TOOLS REQUIRED


DESCRIPTION	PART IMAGE
Tape measure	
Spirit level	
Pencil	
Ø6mm Drill bit	
Ø3mm Drill bit	
Protection eyeglasses	

DESCRIPTION	PART IMAGE
Drill	
Cross head screwdriver	
Mallet	
Silicone sealant	
Gloves	




NO.	Item	Qty
1		x10
2		x1
3		x1
4		x1
5	  ST4*40	x8
6		x2
7		x1
8		x1
9		x2
10		x1
11		x1

NO.	Item	Qty
12		x1
13		x1
14		x2
15		x1
16	 L  R	x2
17		x1
18	 	x2
19		x1
20		x1
21	  ST4*45	x2
22	 2.5mm  3mm	x2


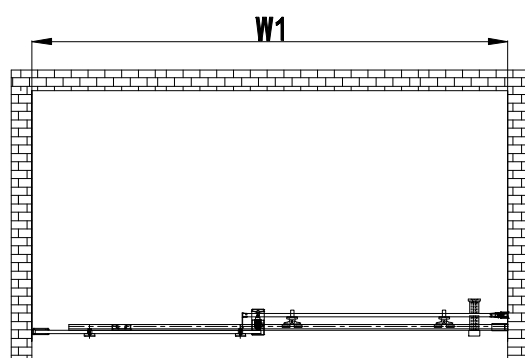


Model	Profile Adjustments
	Min-Max mm
1200	1150-1190
1400	1350-1390
1700	1650-1690


# 1.

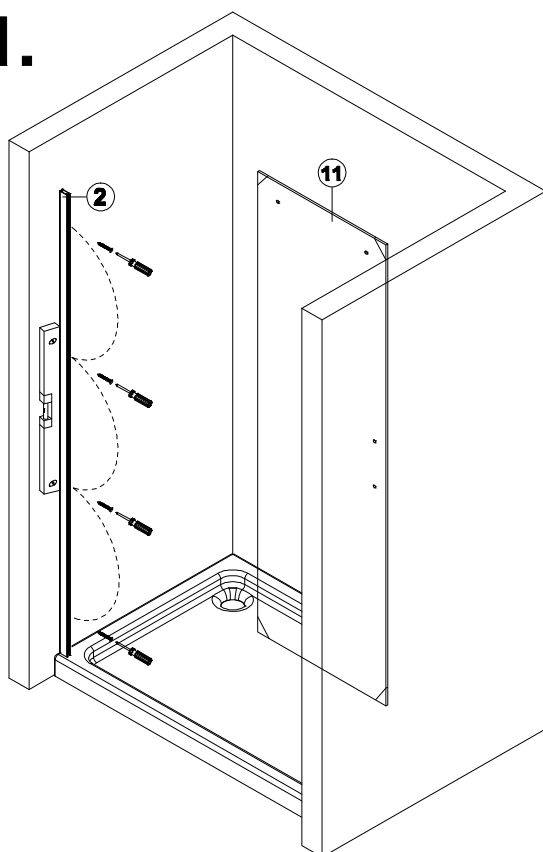




**Punching holes in the wall and installing aluminum materials attached to the wall**

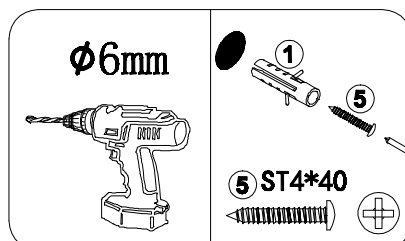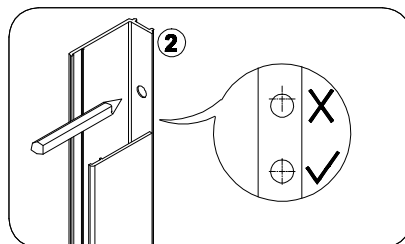





**Place the door glass inside the shower room and pay attention to the glass corner at the bottom.**

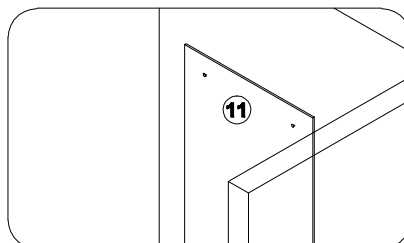





# 2.

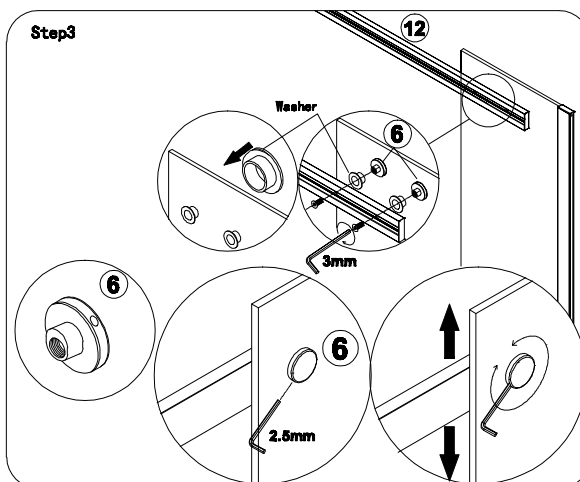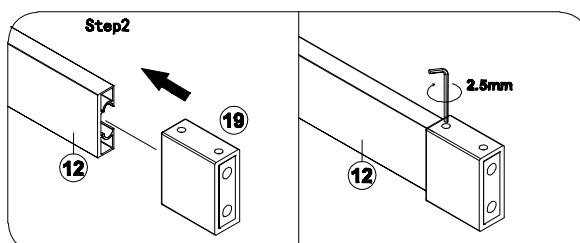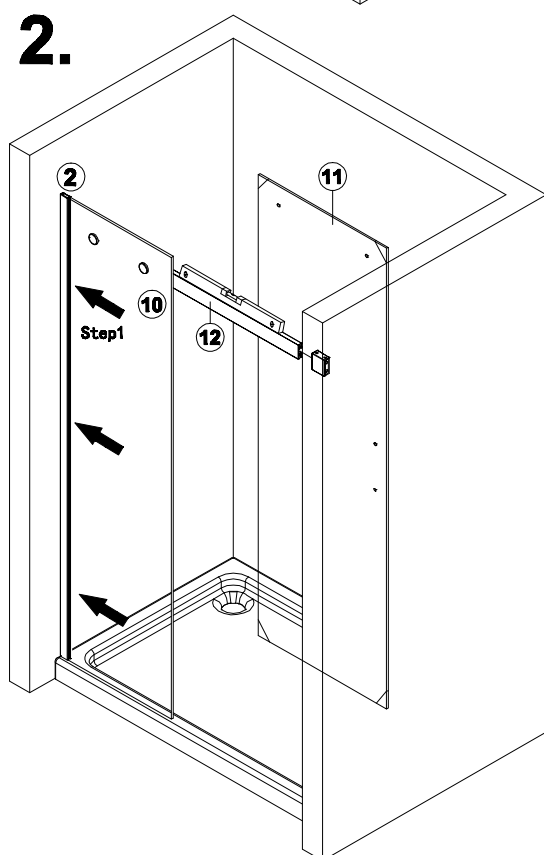





# 3.

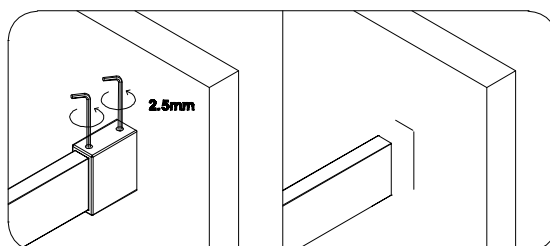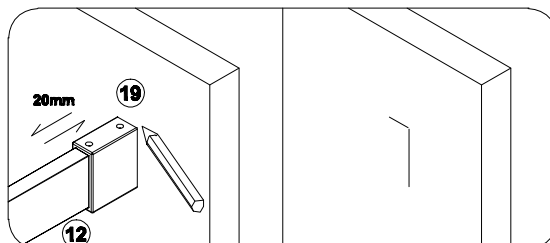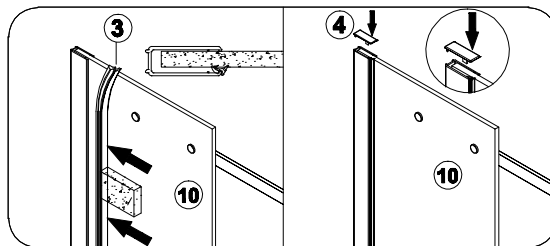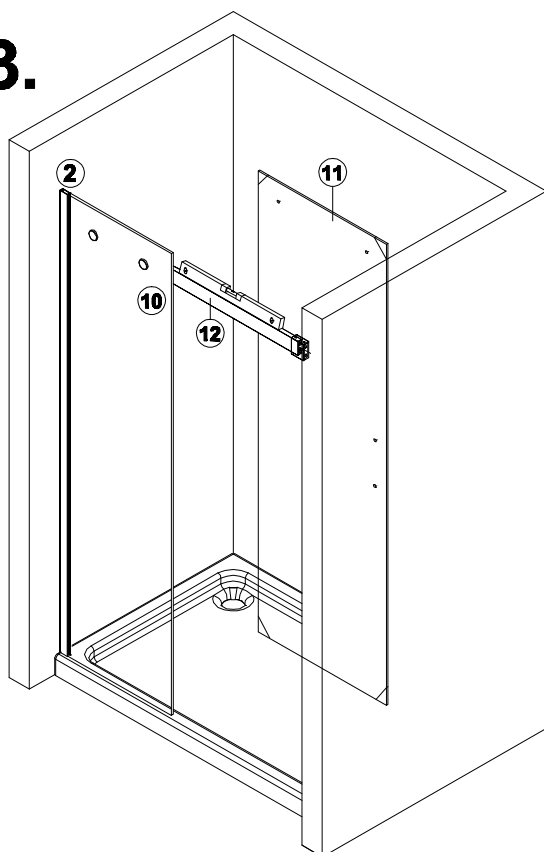




# 4.

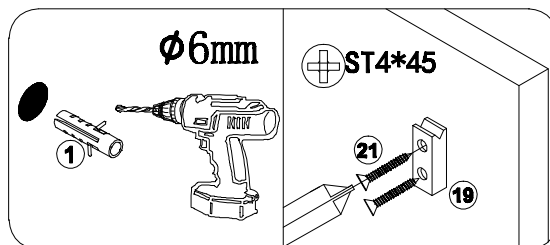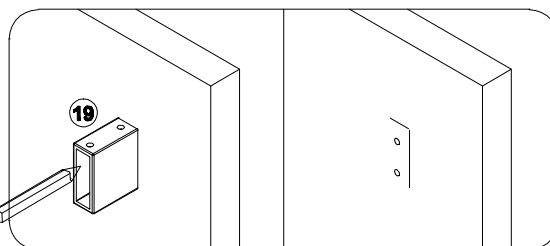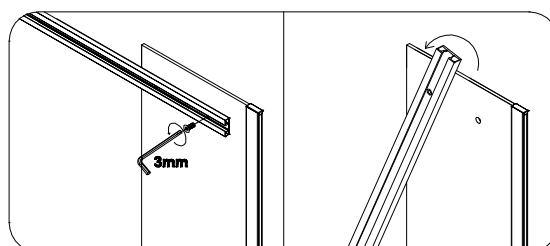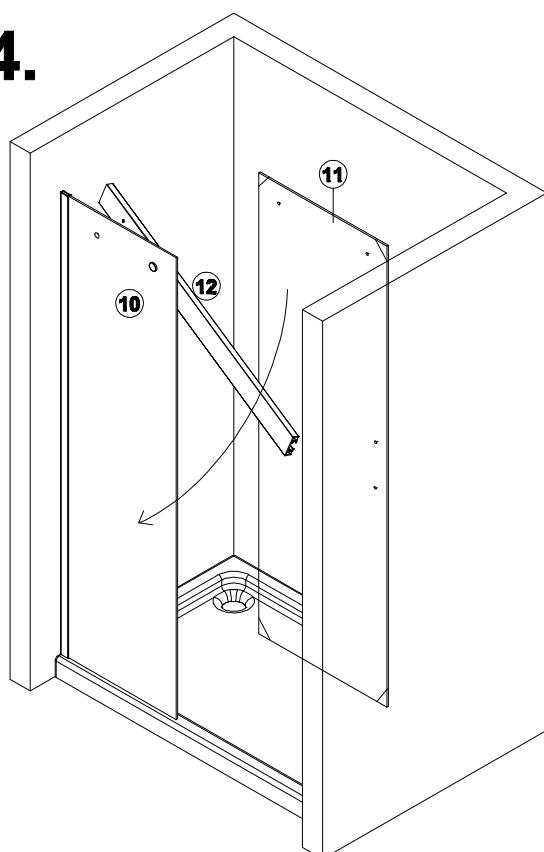





**5.**

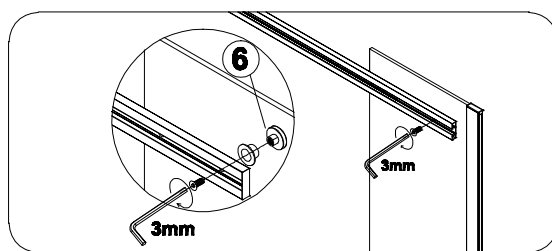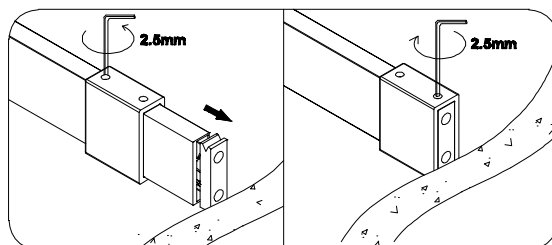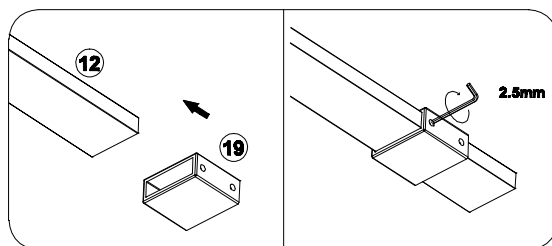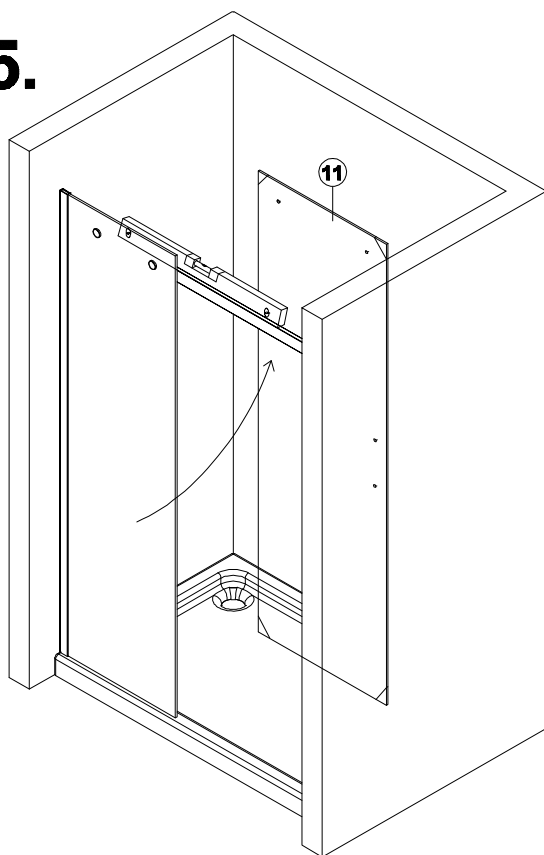


**6.**

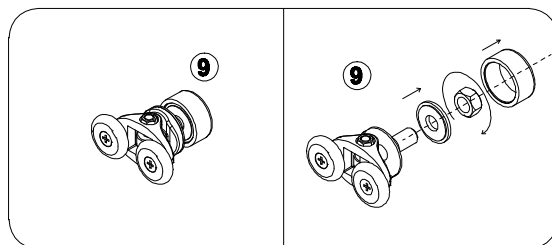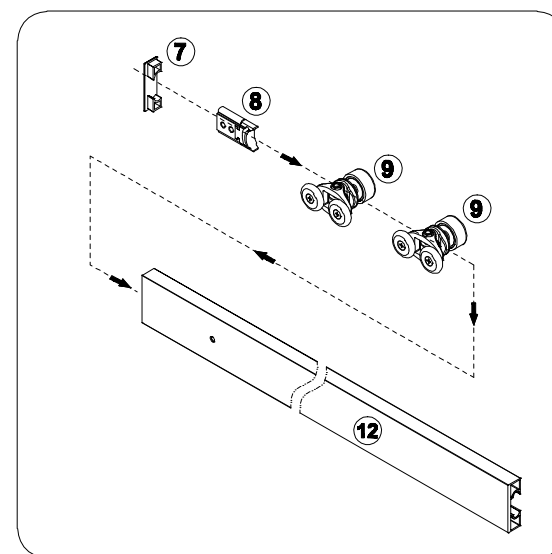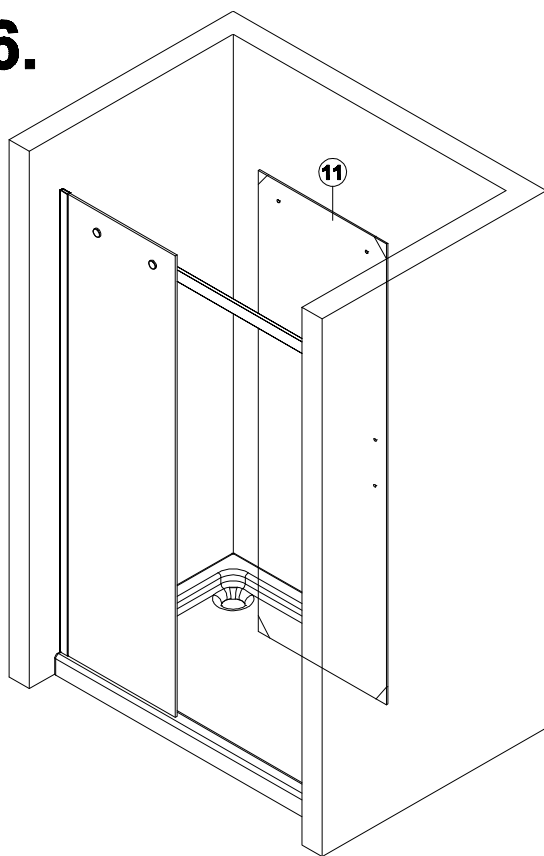



7.

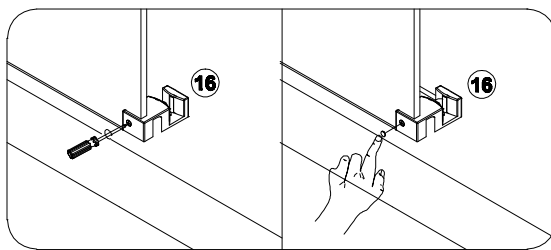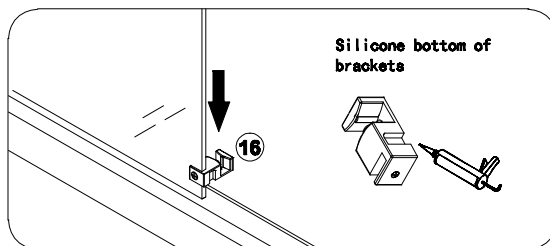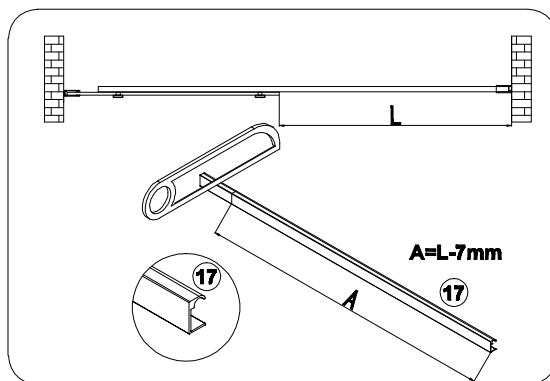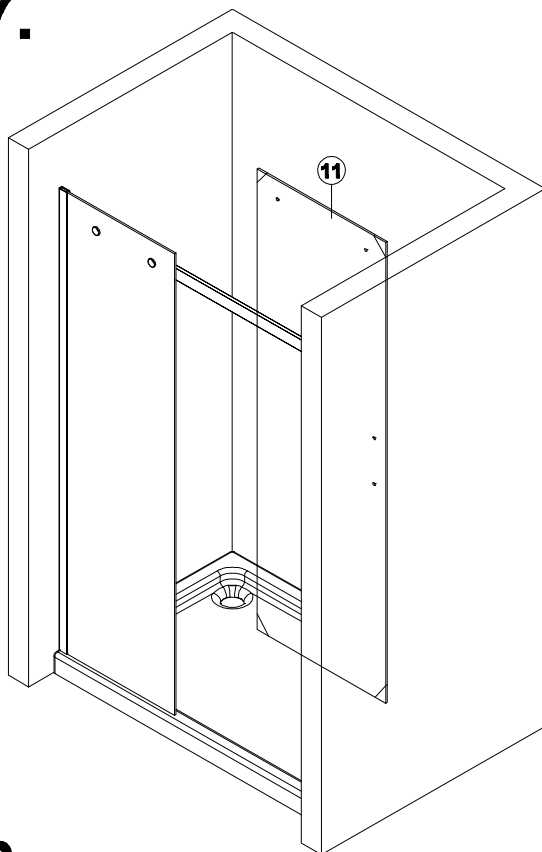

8.



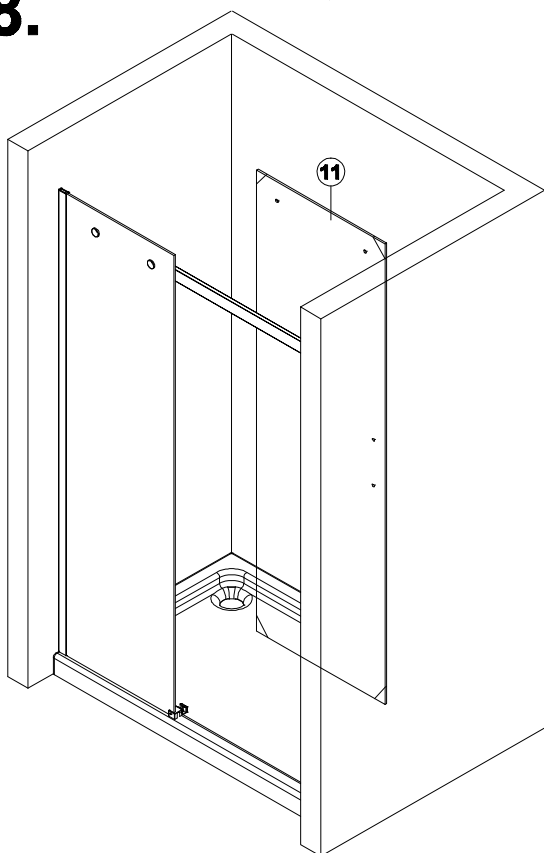


**Make sure the base/tray surface is level. clean and dry before fixing the 3M adhesive bottom guide into position**



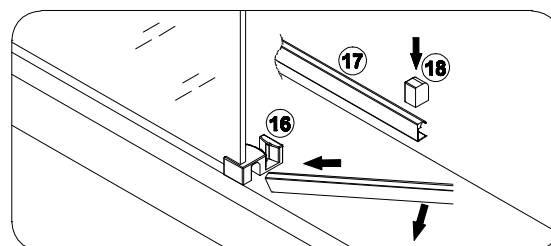
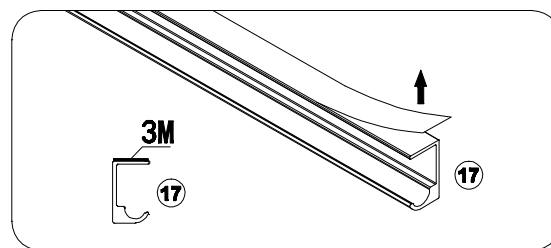








**9.**

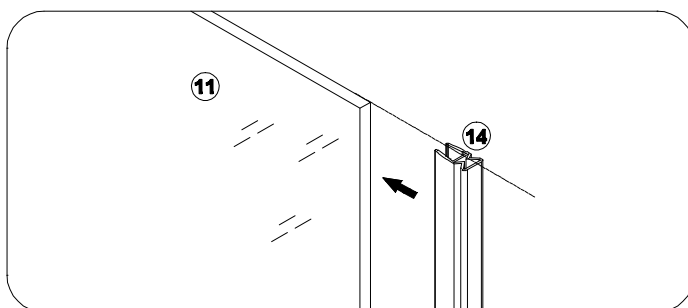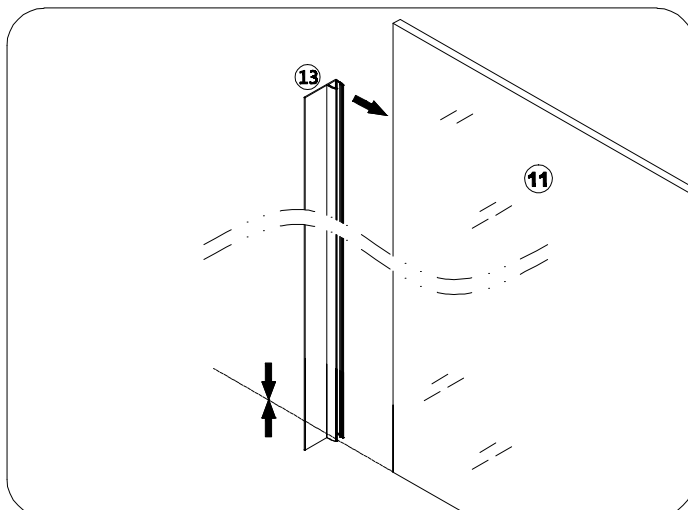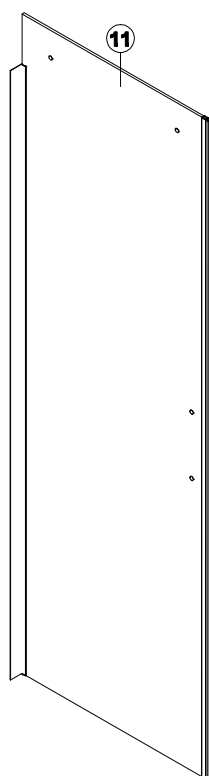




**10.**

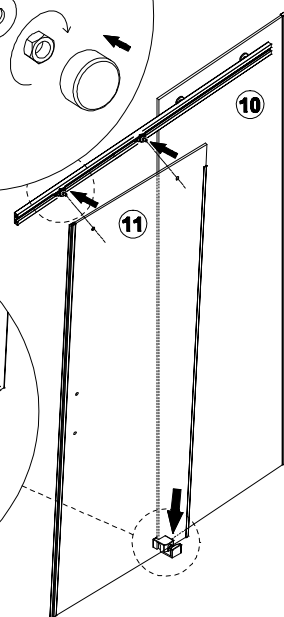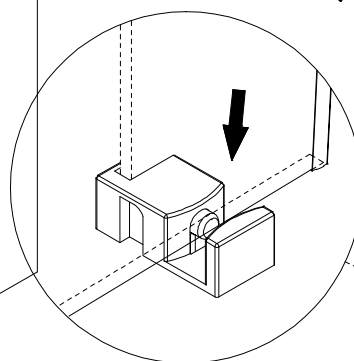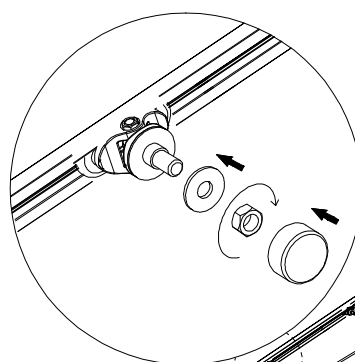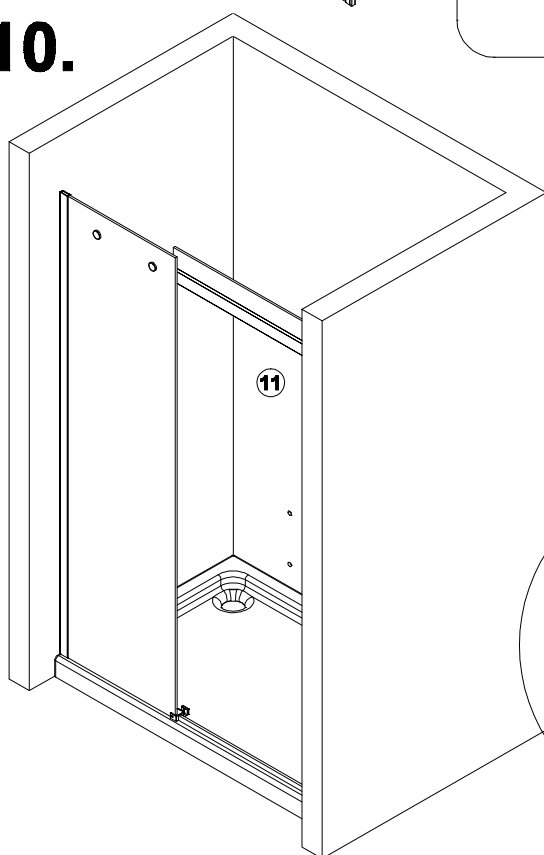


**11.**

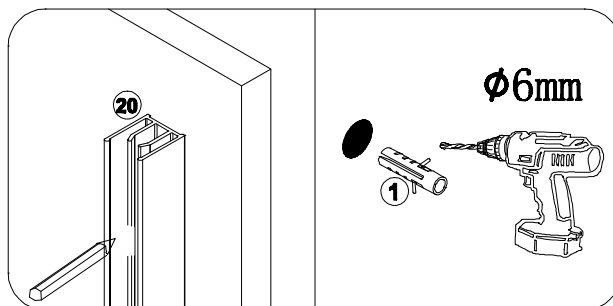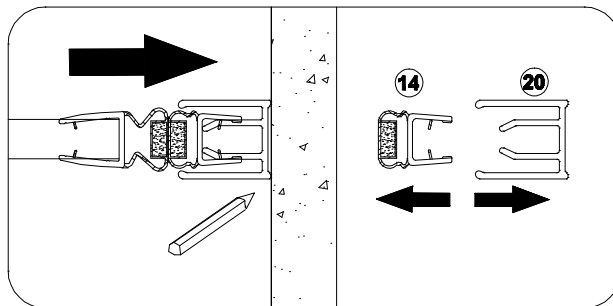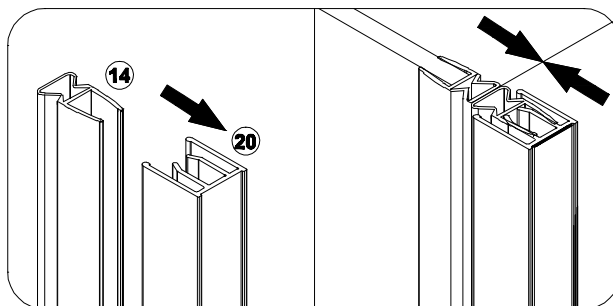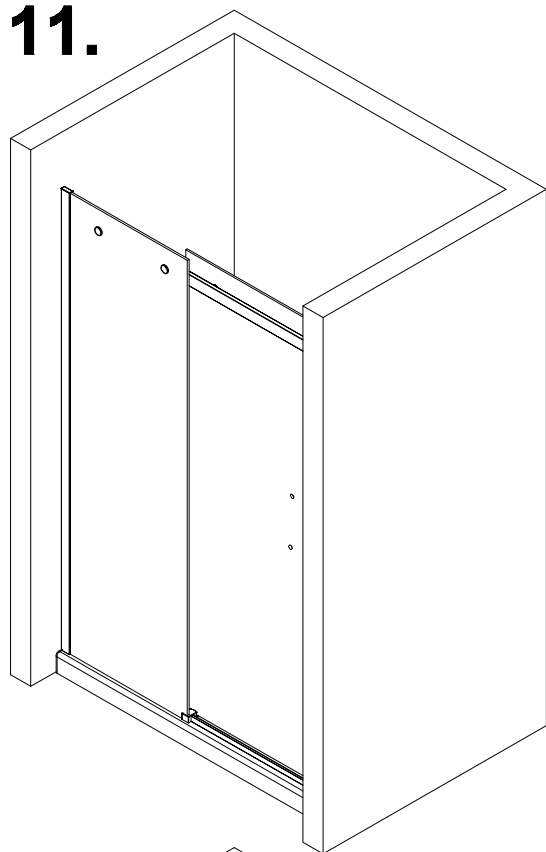


**12.**

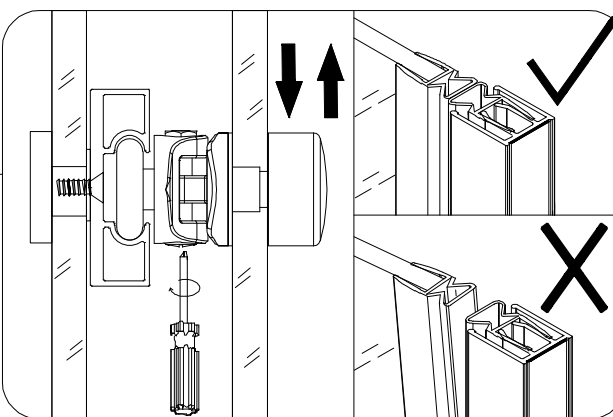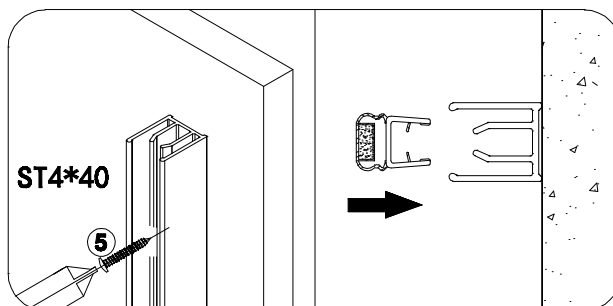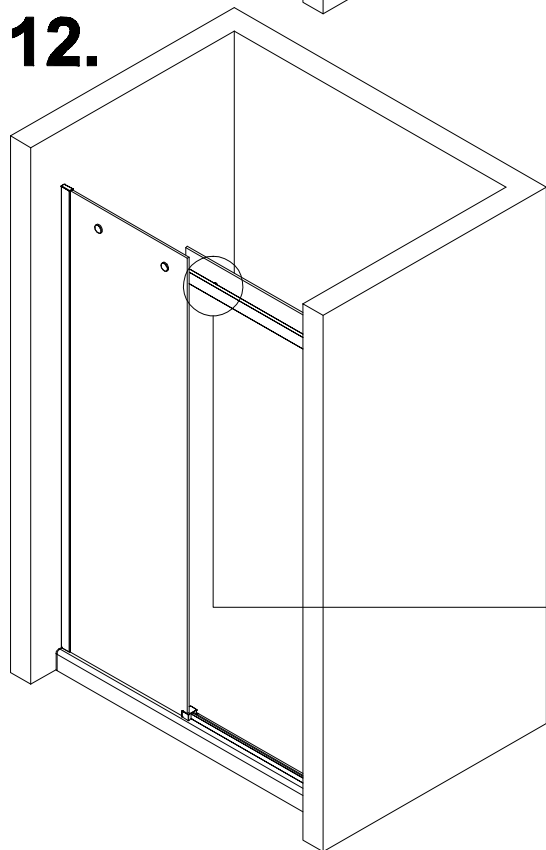






# 13.

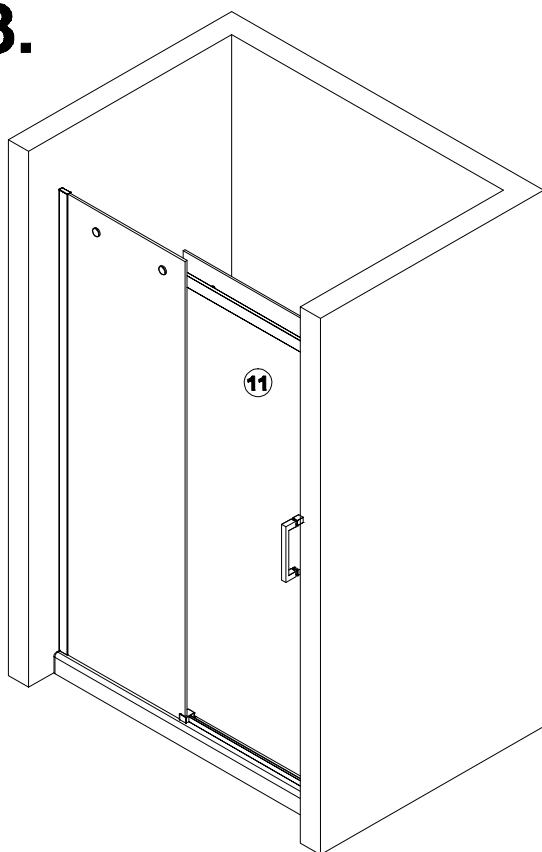

## Handle installation

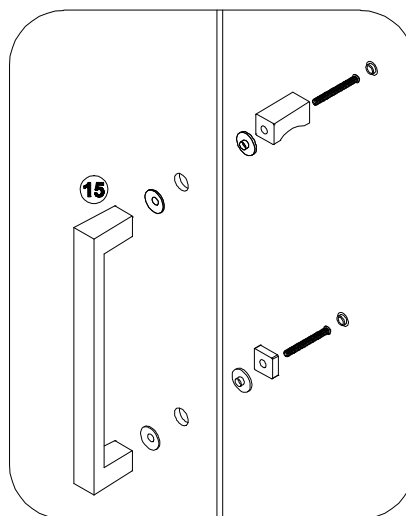

# 14.

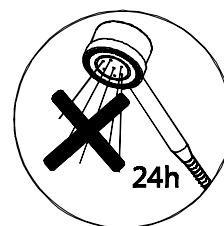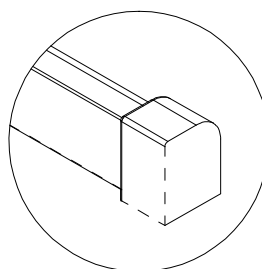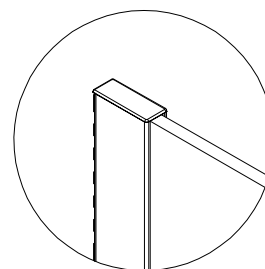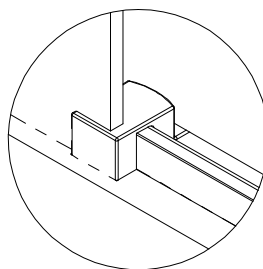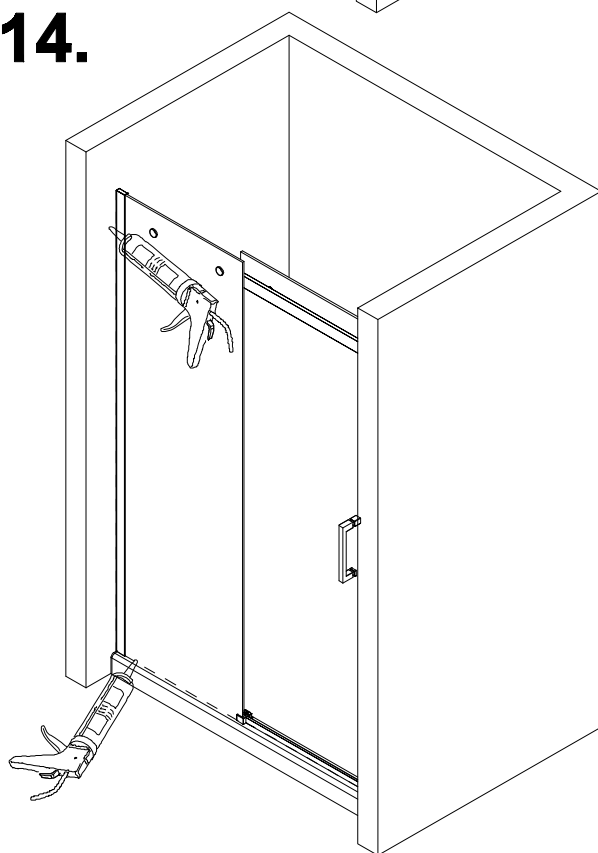

Allow 24 hours for Silicone to dry before use  
Silicone on the outside edge only as shown

### **CARE AND MAINTANENCE :**

**It is important that you clean your shower enclosure after every use.**

**Soapy water is adequate to keep the glass clean however glass cleaner can be used if required. In hard water areas, insoluble lime scale may be deposited on the glass. If this is allowed to build up it becomes increasingly difficult to remove. Regular cleaning will minimise this effect.**

**NEVER use abrasive products or strong chemical cleaners on the glass.**

**Silicone spray may be used to lubricate rollers,hinges and other moving parts**