


FRM-01 Relates to the Below Product Codes
SU-POR-911-05L/R - SubFrame Porsche 911 996 1998/2004
SU-POR-911-06L/R - SubFrame Porsche 911 997 2004/2011
SU-POR-CAY-01L/R - SubFrame Porsche Cayman 987 2005/2012
SU-POR-BOX-01L/R - SubFrame Porsche Boxster 986 1996/2004
SU-POR-BOX-02L/R - SubFrame Porsche Boxster 987 2005/2012
SU-AUD-TT-01L/R - SubFrame Audi TT Mk1 1998/2006
SU-AUD-R8-01L/R - SubFrame Audi R8 Gen 2 2015/Present
SU-FER-360-01L/R - SubFrame Ferrari 360 All 1999/2005

# FITTING INSTRUCTIONS

## FRM-01 AT 405MM

ITEM NO.	PART DESCRIPTION	QTY.
1	FRM-01	1
2	Pair of Premium Runners	1
3	Wide Runner Handle	1
4	M8 x 12mm Button Head Bolt (10.9 Grade)	4
5	M8 x 20mm Button Head Bolt (10.9 Grade)	4
6	Runner Rear Slot Washer	2
7	Seatbelt Spacer Bar	1
8	Seatbelt Bracket (Dependant on Seat Model)	1
9	Original Seatbelt Receiver	1
10	7/16" UNF x 20mm Hex Bolt	1

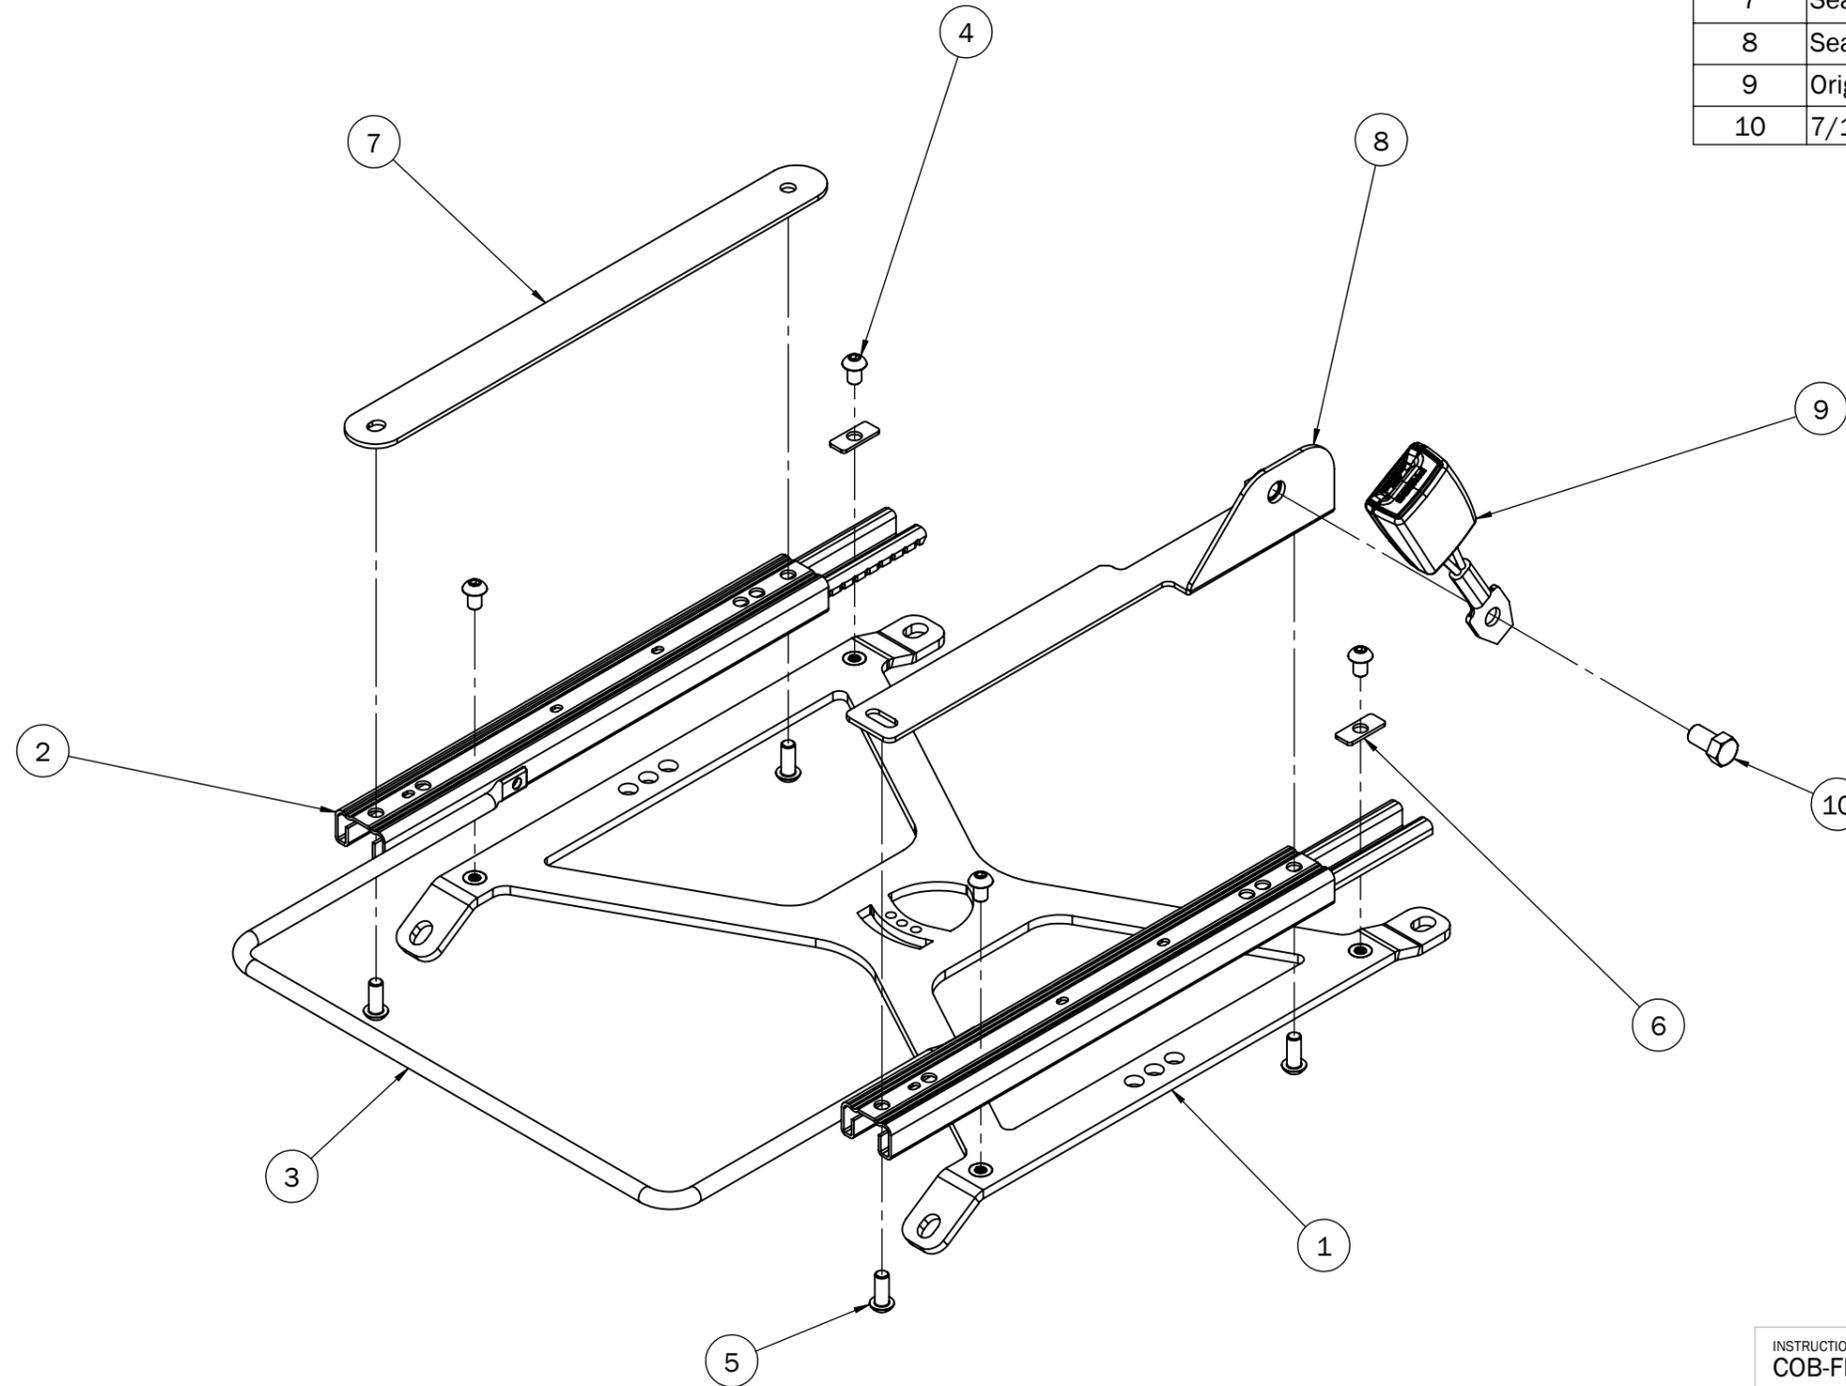

Notes:

THIS DRAWING IS CONFIGURED FOR UK DRIVER'S SIDE. FOR UK PASSENGER SIDE, THE SPACER BAR AND THE SEATBELT BRACKET MUST BE OPPOSITE SIDES IN RELATION TO THIS DRAWING. THEREFORE, A LEFT-HAND SEATBELT BRACKET WILL BE REQUIRED.

Tel: 01952 684020  
E-Mail: sales@cobraseats.com

Cobra Seats Ltd.  
Units D1 & D2  
Halesfield 23  
Telford  
Shropshire  
TF7 4NY

INSTRUCTION REF:  
COB-FRM01-405

TITLE:  
Fitting Instructions - FRM-01 at 405mm

**COBRA SEATS LTD**

SCALE:1:4

Sheet design for A3

SHEET 1 OF 1