

TOOLS YOU WILL NEED

- Drill and drill bits
- Fine toothed saw / jigsaw
- Small spirit level
- Screwdriver
- Adhesive (No Nails / Mitre Glue)
- Silicone gun

PACKAGE CONTENTS

- Slats
- Tube of Adhesive
- MDF Blocks
- MDF 1195 x 295mm (used to make curved frame)
- Heavy Duty Velcro (for access panel fixing)

AQUA
CLOAK

FLEXIBLE BATH PANEL

STEP-BY-STEP FITTING GUIDE

For Corner Baths

MADE IN
BRITAIN

SAFETY FIRST

- ⚠ Use RCD or battery tools near water.
- ⚠ Wear eye protection when drilling.
- ⚠ Check for hidden pipes or cables before drilling.

1 PLAN & TEMPLATE



Use a card template and draw around the corner bath (Fig 1).
Cut the template 20mm inside the line.

2 PREPARE CURVED FRAMES



Use the template to mark the curve on the wood. Cut two curved frames approx. 25mm wide – one for the top and one for the floor (Fig 1.2).

3 FIX TOP CURVED FRAME



Fix the top curved frame with adhesive (No Nails / Mitre Glue) at least 20mm in from the bath lip. Use small clamps to hold while the adhesive sets (Fig 2).

4 MIRROR TO FLOOR



When set, use a spirit level to mirror the curve to the floor at both ends (Fig 2). Fix the bottom curved frame with adhesive. Allow to cure.

5 ADD STRAIGHT BATTENS



Add straight 25mm battens along each side from the corner (top and bottom), at least 20mm in from the bath lip.
Note: Use existing bath support blocks or add extra softwood blocks if needed.

6 POSITION SLATS DRY



Position slats from the corner working towards each wall. Use card wedges to support each slat and check vertical (Fig 7).

7 FIX BLOCKS BEHIND SLATS



Fix a block behind each slat at top and bottom, flush to the rear of the slat, using No Nails / Mitre Glue to the batten. DO NOT fix to the slats yet. Repeat for all slats.

8 REMOVE SLATS



Once adhesive on blocks has cured, remove all slats, keeping them in the same order as removed. (If using gloss slats, remove protective film now.)

9 GLUE SLATS IN PLACE



Starting from the corner, glue slats into position with No Nails / Mitre Glue. Use card wedges to hold until adhesive cures.

10 ACCESS PANEL (OPTIONAL)



For access to taps or wastes, remove two adjacent full slats to create an access panel. Fix Heavy Duty Velcro or optional Clips to the MDF blocks behind the opening and to the back of the two slats.

11 FINAL CHECK



Once adhesive has cured, remove card wedges. Check each slat is secure, vertical and aligned.

12 SEAL EDGES



Seal the top edge, sides and bottom where the panel meets the wall and floor with a sanitary silicone sealant (Fig 8).

Fig 1.

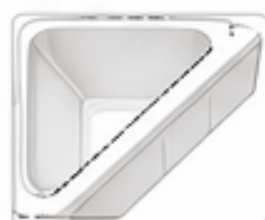


Fig 1.2.



Fig 2.



Fig 3.



Fig 4.



Fig 5.



Fig 5.1



Fig 6.



Fig 7.



Fig 7.1



Fig 8.



IMPORTANT DISCLAIMER: All baths are different. These instructions are provided as a general guide only to help with the installation of Flexible Bath Panels. In some cases, due to the design of the bath, room conditions or other factors, you may encounter issues not covered in this guide. The installer is responsible for assessing each situation and using alternative methods where necessary to achieve a safe and secure fit.



PLEASE READ ALL INSTRUCTIONS BEFORE STARTING.
If in doubt, consult a suitably qualified person.

Bath Panel Store Ltd or Aquacloak cannot be held responsible for faults or damage caused during installation.

MADE IN
BRITAIN