







MOTOCADDY®

S-SERIES SEAT Fitting Instructions

Attaching the Seat mount to your S-Series trolley

1. Place trolley in folded position
2. Turn it upside down to expose the underside of the battery tray (fig. 1)
3. Attach **Section A** to the underside of the trolley using 4 screws (fig. 2)
4. Connect **Section B** to **Section A** using the three remaining screws (fig. 3)

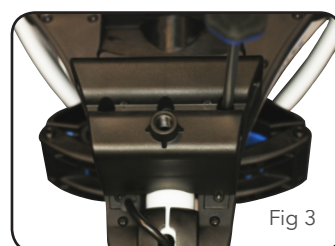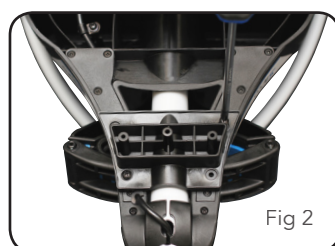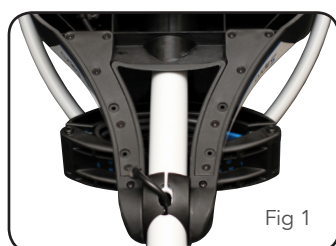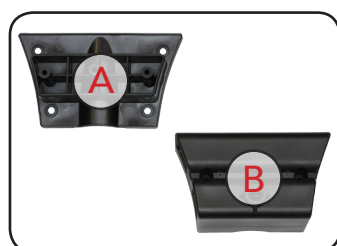

Assembling the Seat

The main section of the seat will arrive in two parts.

1. Attach the padded seat top to the twin tubed section so that the seat overhang aligns with the feet (fig. 4)
2. Insert the nuts and bolts in position and secure using the allen key provided (fig. 5)



Fitting the Seat to your trolley

1. Insert the seat bar into the pre-fitted mount until there is about the same amount of tube on both sides (fig. 6)
2. Secure and tighten underneath with plastic bolt (fig. 7)
3. Slot the legs of the seat onto the end of the seat bar (fig. 8)

The seat is now attached and ready to use.

