


Product Name: CRW OmniBlend Drywall Access Panel

General Schematic

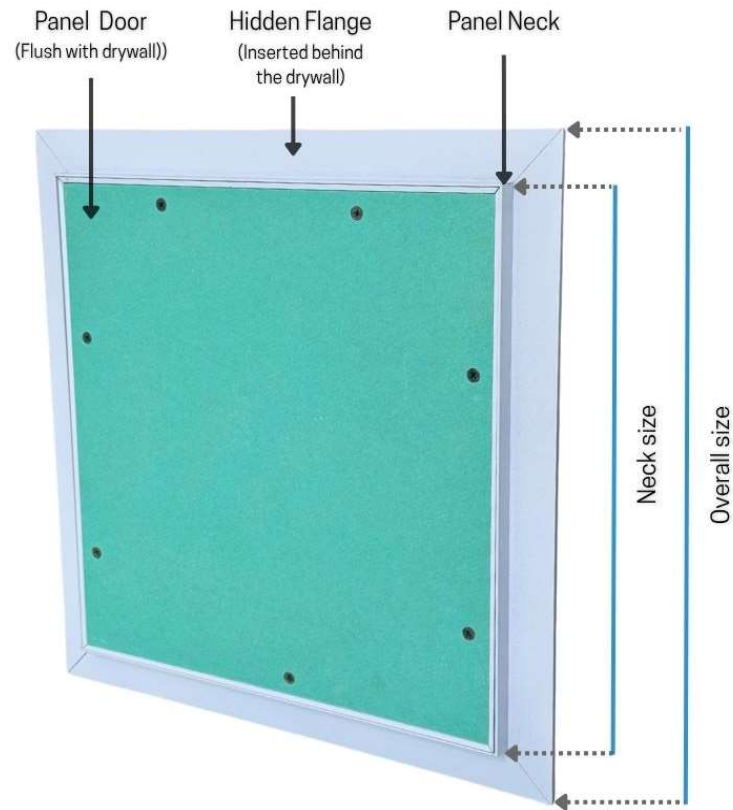

Panel Neck is seated/fitted in wall opening

Definitions

Neck size: Size of the opening that would be cut into the wall/ceiling to install the access panel


Overall size: Total size of access panel as visible once installed

Size chart

Product number	Wall Opening (nominal) inches	Neck size (L1 x W1) mm	Overall size (L2 x W2) mm
BYDAPOB-0606	6 x 6	155 x 155	207 x 207
BYDAPOB-0608	6 x 8	155 x 205	207 x 257
BYDAPOB-0808	8 x 8	205 x 205	257 x 257
BYDAPOB-0810	8 x 10	205 x 255	257 x 307
BYDAPOB-0812	8 x 12	205 x 305	257 x 357
BYDAPOB-1012	10 x 12	255 x 305	307 x 357
BYDAPOB-1016	10 x 16	255 x 405	307 x 457
BYDAPOB-1212	12 x 12	305 x 305	357 x 357
BYDAPOB-1216	12 x 16	305 x 405	357 x 457
BYDAPOB-1220	12 x 20	305 x 505	357 x 557
BYDAPOB-1224	12 x 24	305 x 605	357 x 657
BYDAPOB-1616	16 x 16	405 x 405	457 x 457
BYDAPOB-1620	16 x 20	405 x 505	457 x 557
BYDAPOB-1624	16 x 24	405 x 605	457 x 657
BYDAPOB-1818	18 x 18	455 x 455	507 x 507
BYDAPOB-2020	20 x 20	505 x 505	557 x 557
BYDAPOB-2024	20 x 24	505 x 605	557 x 657
BYDAPOB-2424	24 x 24	605 x 605	657 x 657

Other Specifications

- 1.2mm extruded aluminum profile frame
- White powder coating finish
- 12.5mm moisture resistant gypsum board
- Mini latch push to open
- Safety wire and hook
- Brush seal between frames
- Spring loaded hinge door fully removable
- Made in China

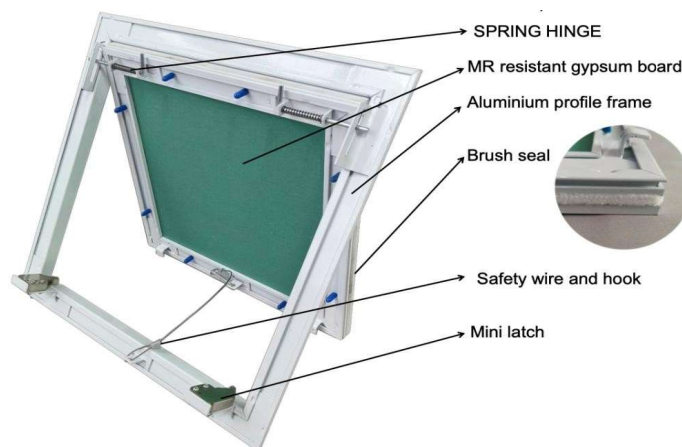

Installation Guidance

1. Measure neck size of access panel
2. Cut hole on wall +5mm larger than neck size
3. Remove the door from the panel frame
4. Fit the frame to the hole
5. Fix frame on the drywall using drywall screws
6. Replace the door on the frame
7. For applications where panel is to match the surrounding wall, finish the door as with normal drywall finishing, ie mudding, sanding and painting